



Daily Cleaning Procedure

1

Isolate the electrical supply and remove the Dryer Cover from the base.

2


Clean the top of the cover using a damp cloth. Clean the underside of the cover using a damp cloth, paying particular attention to the air nozzles and base matting surfaces.

3

Clean the airflow area using a damp cloth.

4

Reassemble the unit, reconnect electrical supply and operate several cycles before use.

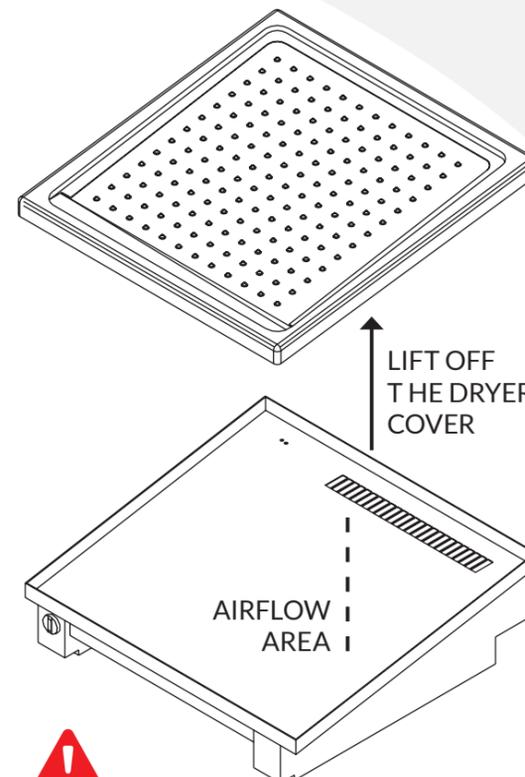

LIFT OFF THE DRYER COVER

AIRFLOW AREA



Do not use proprietary cleaning agents. The odours will contaminate the glasses.

Cautionary Notes

- ✓ Always use a full load of glasses and place the basket centrally onto the Airack (Fig 1).
- ✓ Ensure the correct orientation of compartmented baskets. The glasses should be tilted forward to the front of the Airack (Fig 2).
- ✗ Never use the Airack for dregs, or liquid disposal.
- ✗ Never use the Airack for any other purpose other than drying glassware.

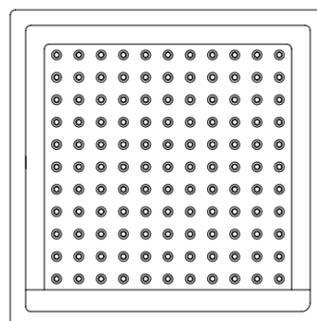


FIG 1

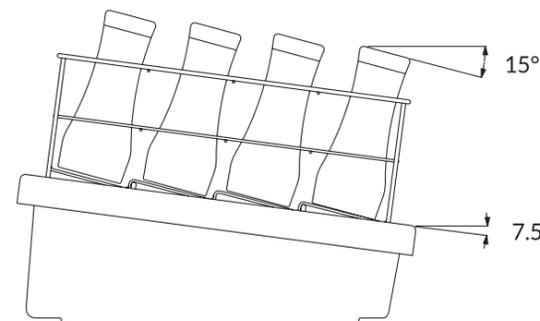


FIG 2

Using the Airack Lite

1

Switch on the power to the Airack.

2

Immediately after the washing process, place a full basket of glasses on top of the unit and rotate the timer to the desired time to start the drying cycle.

3

At the end of the drying cycle the unit will automatically switch off and will remain off until the timer is switched on again.

4

When the drying cycle is complete, remove the basket of clean dry glasses for immediate use, or to storage.

If you require help



SALES & SUPPORT
01785 247 267



EMAIL
service@barcare.co.uk



WEBSITE
www.barcare.co.uk



Barcare Supreme Ltd



The AIRACK™



Installation Requirements

Please read before installing your Airack Glass Dryer



Fitting

- Unpack the Airack in the area in which you intend to use it.
- The airack must be sited on a sound level surface with adequate clearance for servicing, ideally within close proximity to your glasswasher and no further than one metre from the electrical socket.
- It is recommended that the Airack is placed on top of your glasswasher or on top of the bar area.
- The Airack can be mounted onto a purpose made basket stand providing optimum working height.
- It is recommended that if your airack has been supplied mounted on a basket unit it is placed within close proximity to your glasswasher and no further than one metre from an electrical socket.



Electrical

- The airack is supplied to a 240v 3 pin socket with a one metre mains cable. An RCD is recommended. Check that the supply voltage is within the range stamped on the plate fitted to the underside of the unit.
- The socket with the airack is to be plugged no further than one metre away from the airack and must be used for the airack only.

- The Airack can be free-standing on a flat horizontal counter-top, onto a shelf or on the top of a glasswashing machine.

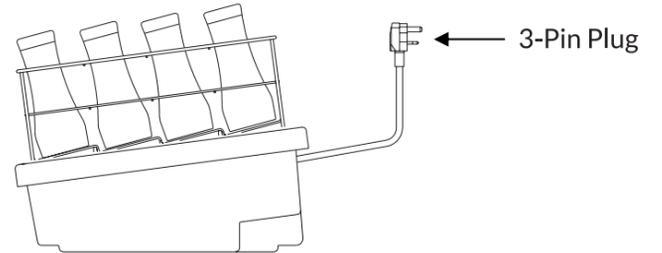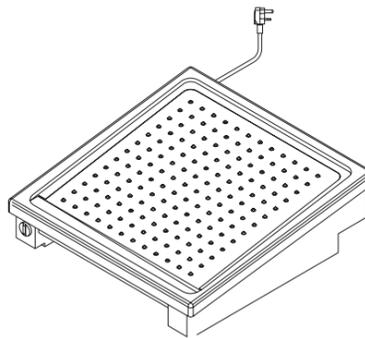

- Alternatively, the unit can be mounted onto a Barcare basket unit close to the glasswasher. This solution provides an optimum working height and storage for 400, 450 & 500mm sq. racks.

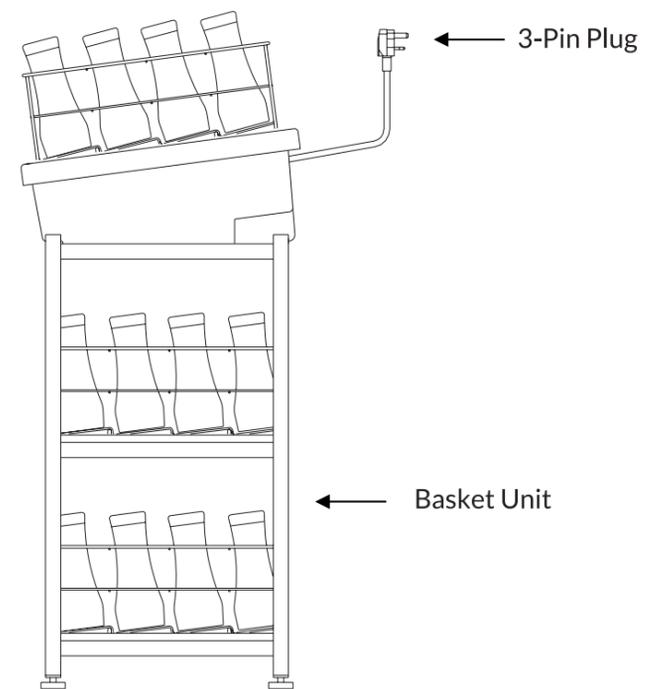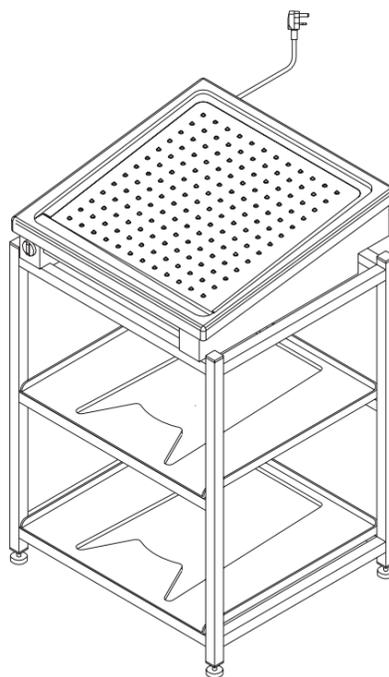

Getting the best out of your Airack

For optimum results consider three vital factors:

1. That your glasswasher is in good working order and is reaching between 50 – 60°C in the wash tank and 65 – 75°C in the rinse tank.
2. The water supplying your glasswasher is soft. In hard water areas a water softener must be fitted and regularly regenerated.
3. The detergent and rinseaid chemical being used by the glasswasher is of a good quality.

We recommend Barcare products which have been specially formulated for commercial use, providing sparkling results whilst being kind to your machine. Easy to order by phone or online for fast delivery.



If you require help



SALES & SUPPORT
01785 247 267



EMAIL
service@barcare.co.uk



WEBSITE
www.barcare.co.uk