



QUICK START GUIDE

1

WIPE OUT THE OVEN WITH A CLEAN CLOTH AND APPLY GUARD BEFORE USE

2

ENSURE CIBO+ IS **PLUGGED INTO** A LIVE SOCKET AND THE SOCKET IS **SWITCHED ON**

4

SELECT A PROGRAM



3

PRESS AND HOLD UNTIL BEEP




5

GETTING READY/
PRE HEATING



6

GREEN SCREEN
WHEN
READY

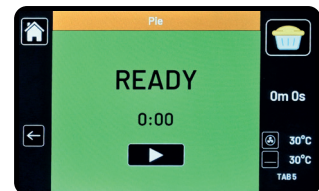

8

GREEN SCREEN
WHILST
COOKING




7

LOAD
FOOD



9

UNLOAD
FOOD

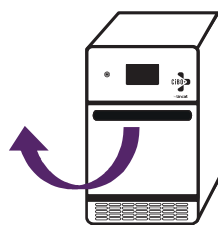

10

PRESS THE HOME
ICON TO RETURN
TO THE MENU

