



Installation, Operating and Servicing Instructions

Silverlink Grill Electric SGE1

Please make a note of your product details for
future use:

Date Purchased: _____

Model Number: _____

Serial Number: _____

Dealer: _____

SILVERLINK 600

CONTENTS

Important Information	2
Warnings and Precautions	3
Technical Data	3
Checklist of Enclosures	3
Installation and Commissioning	3-5
Operating Instructions	5-6
Cleaning	6-7
Servicing, Maintenance and Component Replacement	7
Fault Finding	7
Spare Parts List	8
Accessories	8
Service Information and Guarantee	8-9

IMPORTANT INFORMATION



Read these instructions carefully before using this product, paying particular attention to all sections that carry warning symbols, caution symbols and notices. Ensure that these are understood at all times.



 
WARNING!

This symbol is used whenever there is a risk of personal injury.



CAUTION!

This symbol is used whenever there is a risk of damaging your Lincat product.

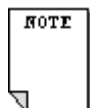

NOTE:

This symbol is used to provide additional information, hints and tips.

KEEP THIS MANUAL FOR FUTURE REFERENCE

WARNINGS AND PRECAUTIONS



This appliance must be installed, commissioned, and serviced by a qualified person in accordance with national and local regulations in force in the country of installation.

If the supply cord is damaged, it must be replaced by the manufacturer, its service agent, or a similarly qualified person.

Ensure that the plug/socket is accessible at all times.

Do not use the unit if the glass covering the elements has been damaged.

Strip the plastic coating and clean the appliance before use.

During operation, parts may become hot - avoid accidental contact.

Disconnect this appliance before servicing, maintenance, or cleaning.

TECHNICAL DATA

Model	Height (mm)	Width (mm)	Depth (mm)	Weight (kg)
SGE1	347	635	373	25.8

CHECK LIST OF ENCLOSURES

Instructions manual
Crumb tray
Toast rack

INSTALLATION AND COMMISSIONING

This appliance must be earthed.



An equipotential bonding terminal is provided to allow cross bonding with other equipment.

If replacing the plug connect the terminals as follows:

Green and Yellow wire	Earth	E
Blue wire	Neutral	N
Brown wire	Live	L



- During installation do not place on surfaces or near walls, partitions, or kitchen furniture and alike – unless they are made of non-combustible material or clad with non-combustible heating-insulating material and pay attention to fire prevention regulations. (see Fig 1.)



- Choose an install site away from major heat sources. (see Fig 2.)
- DO NOT position so that oil vapours are drawn in from fryers, grills, griddles, etc. (see Fig 2.)
- Do not affix labels/stickers to the unit other than those applied or approved by the manufacturer.
- Dirty extraction filters and drip trays may become a fire hazard due to a build-up of grease/fat and drip down onto equipment below. Regular cleaning of extraction filters and drip trays MUST be carried out and it's the installer's responsibility to make the operator aware of this.

Allow a minimum clearance of (A) 300mm around the sides and (B) 500mm above the appliance for hot air to escape. (See Fig 1.)

The air intake (See Fig 1.) is located on the underside of the grill and the air outlet is at the back of the grill. It is important that the airflow is oil-free and as cool as possible.

Place the grill on a permanent nonslip/non-flammable flat surface that is LEVEL, STABLE, and STRONG enough for the grill and contents or on a suitable wall bracket or shelf.



If the unit becomes too hot it will self-protect and switch to 'OFF' before the timer has elapsed. 'OH' will be displayed if this has happened. To avoid this the unit will need to be relocated to a cooler area.

Instructions for fixing the SGE1 to the various shelves and stands are provided with that accessory. Always secure the appliance to the support.

Plug the unit in ensuring the plug socket remains accessible.

Power Ratings

Model	kW	Amps
SGE1	2.8kW	13.0 max

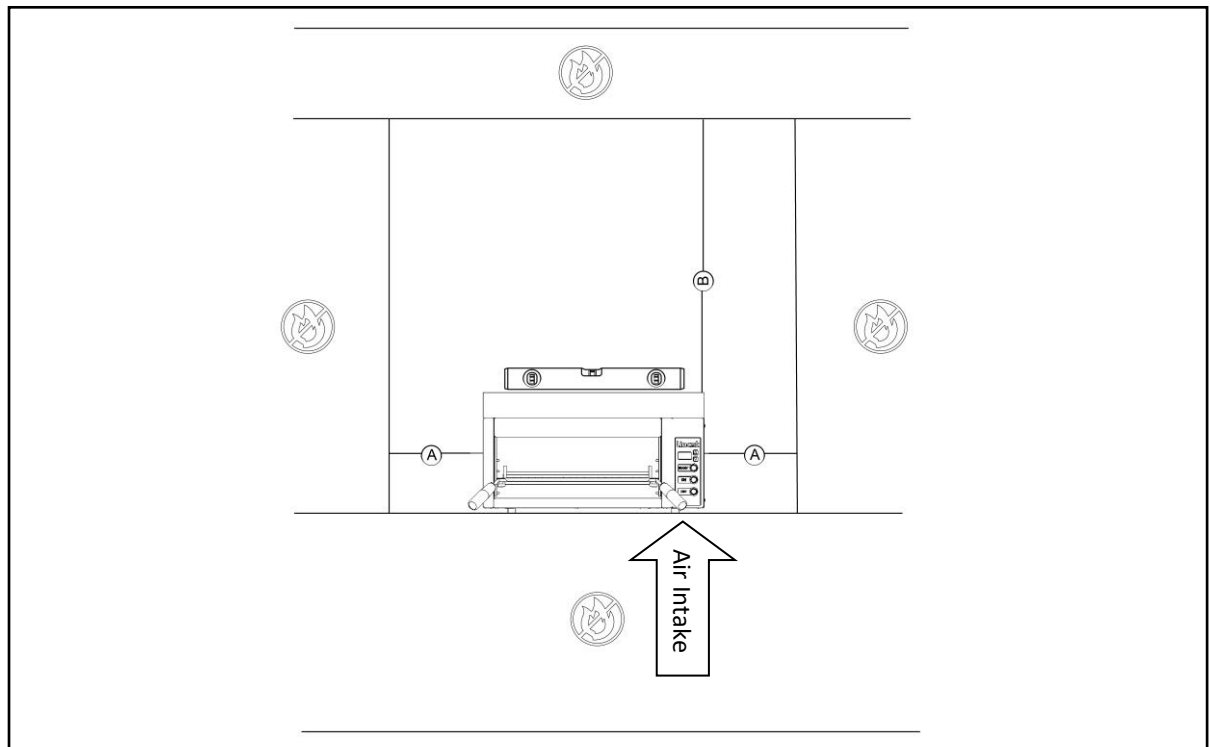


Fig 1

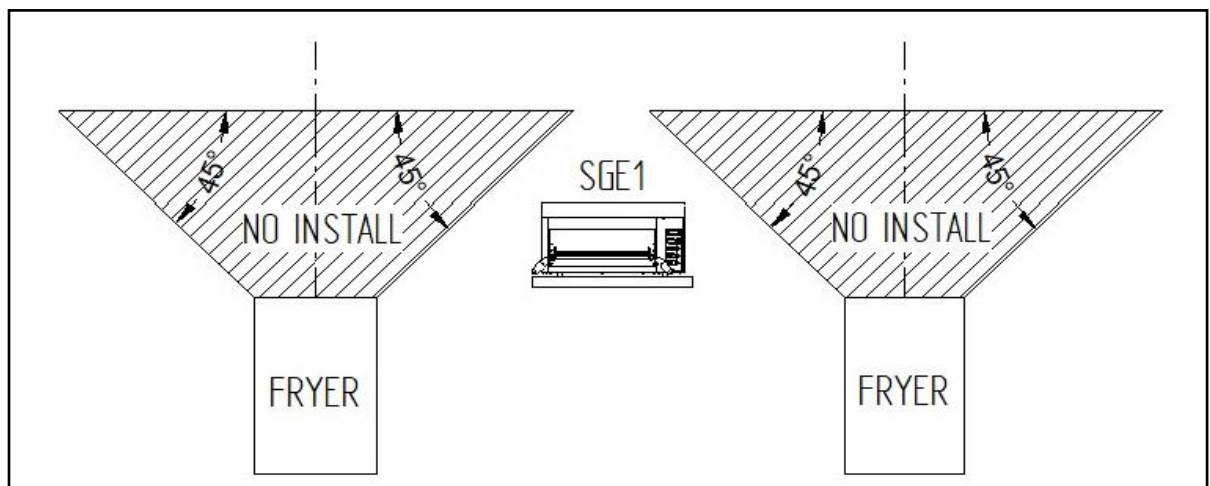


Fig 2





OPERATING INSTRUCTIONS


Only qualified or trained personnel should use this appliance.

Connect the appliance to a socket and switch on the power supply.

The 'OFF' Button will illuminate.

The unit has 3 modes. The currently selected mode is indicated by the switch illuminating. When BOOST or ON are pressed, a timer will start to countdown.

Controls	Use for:	 Default Timer Settings	Adjustable range
 (Full Power)	<ul style="list-style-type: none"> Fast Cooking Quick start up from cold 	5 min timer before switching to 'ON' mode. Displayed as: 5.00	1 min – 9 mins
 (Half Power)	<ul style="list-style-type: none"> Maintaining cavity temperature for fast cooking Controlled cooking from a hot start 	30 min timer before switching to 'OFF' mode. Displayed as: 0.30	30min – 9hrs 59min
 (Off)	<ul style="list-style-type: none"> Press to turn elements Off 	-	-

 (Timer Adjustment)	<p>Unlock Adjustment - Press and hold the two arrow buttons. The display will flash showing the timer can be adjusted.</p> <p>Select Mode – Select either BOOST or ON</p> <p>Adjust - Use the up and down arrows to adjust the timer.</p> <p>Relock Adjustment - Press and hold the two arrow buttons to relock the timer. The display will stop flashing showing the timer adjustment is locked.</p>
---	---

Once the timer finishes the grill will drop down to the next lower power mode. This enables the grill to save energy when not in use but retain enough heat in the cavity for fast cooking when required.

The two fast heating elements inside the grill have been spaced for optimum heat distribution. If a more uniform heat distribution is required, it is recommended a lower shelf position is used.

CLEANING



Your Lincat product has a manufacturer's warranty. This requires you to maintain and care for your product and follow maintenance instructions. If you fail to



maintain your unit or damage components Lincat may charge you for a warranty repair. Please check the website for terms and conditions.

Do not use a water jet or steam cleaner, and do not immerse this appliance.



Clean all panels with warm water and mild detergent, do not use abrasive materials. Dry with a soft cloth.

SERVICING, MAINTENANCE AND COMPONENT REPLACEMENT

All servicing, maintenance and component replacement on this appliance should be carried out by one of our recommended service engineers.

FAULT FINDING

Please refer to the Service Help Desk number on the final page of this manual.

 <p>(Over Heated)</p>	<p>'OH' is displayed whenever the unit has Overheated triggering the Thermal Cut Out. This feature allows the unit to self-protect whenever the control board experiences excessive heat. The unit will need to cool down before it can be used again.</p> <p>If the unit repeatedly Overheats will need to be installed in a cooler area away from heat sources.</p>
 <p>(Cooling Fan)</p>	<p>If the Fan does not turn off once the unit has sufficiently cooled itself the fan override may be turned on.</p> <p>Pressing BOOST, ON, and OFF simultaneously will turn the cooling fan on/off when the unit is at lower temperatures.</p>

SPARE PARTS LIST

Part Number	Description
EL309	Element
CB22/S	SGE1 CONTROL BOARD ECO SALAMANDER GRILL SPARES
FA120	FAN 60MM X 60MM
FE37	FOOT
GL739	GLASS
PL202	MAINS CABLE ASSY
RO362	ROCKWOOL
SR06	SIDE RACK

ACCESSORIES

Part Number	Description
BR15	Wall brackets
SGE1/BS	Bench stand
SGE1/FS	Floor stand
SGE1/WS	Wall shelf
ABP03	Branding Plate Kit

SERVICE INFORMATION

For help with the installation, maintenance and use of your **Lincat** equipment, please contact our service department:

☎ UK: 01522 875520

For non-UK customers, please contact your local Lincat dealer.

All service work, other than routine cleaning should be carried out by one of our authorised service agents. We cannot accept responsibility for work carried out by other persons.

To ensure your service enquiry is handled as efficiently as possible, please tell us:

- Brief details of the problem
 - Product code
 - Type number
 - Serial number
- } All available on serial plate

Lincat reserve the right to carry out any work under warranty, given reasonable access to the appliance, during normal working hours, Monday to Friday, 08:30 to 17:00.

GUARANTEE

This unit carries a comprehensive UK mainland 2-year warranty. The guarantee is in addition to and does not diminish your statutory or legal rights.

The guarantee does not cover:

- Accidental damage, misuse or use not in accordance with the manufacturer's instructions
- Consumable items (such as filters, glass, bulbs, slot toaster elements and door seals.)
- Damage due to incorrect installation, modification, unauthorised service work or damage due to scale, food debris build-up, etc.

The manufacturer disclaims any liability for incidental, or consequential damages. Attendance is based on reasonable access to the appliance to allow the authorised technician to carry out the warranty work.

Service calls to equipment under warranty will be carried out in accordance with the conditions of sale. Unless otherwise specified, a maximum of 15 minutes of administrative time, not spent directly carrying out servicing work, is provided for within the warranty. Any requirement for staff attending the call to spend greater time than 15 minutes due to administrative requirements, such as on health and safety risk assessments, will be chargeable at the prevailing rate.